

Installation Instruction

Accessories


Operating Instructions

Accessories

Sliding Door

We recommend that the top part /gather of the convector chamber is designed so that there is access to the sliding door system, i. e, a hole or surface of sufficient size with plaster without tiling.

The vertical sliding mechanism covers need to be in line when bricklaying the corners of the fireplace. If the covers are bricked over it will obstruct later servicing of the sliding mechanism.

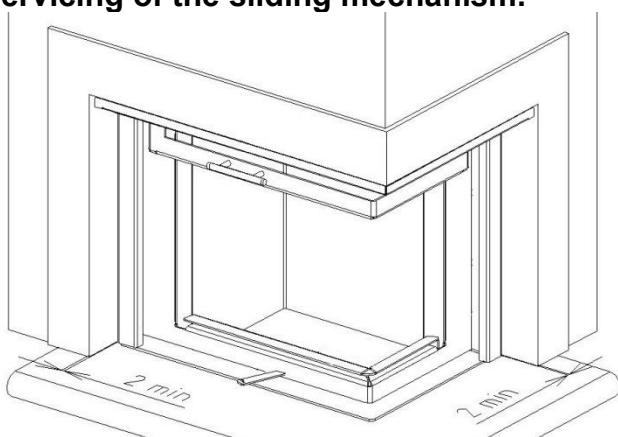

Doors open upwards. Before using, please ensure that the door locks are removed as per instructions.

Cleaning the glass sheet of fireplace insert size from 44 to 100:

1. Place the door in the lower position, lock it by turning the lever over the door.
2. Turn the lever on the right side of the door loosen one side of the door. Gently rotate the lever till it can't go any further which is about 120 ° .

Note: Check the separate description for the fireplace inserts R90, 2R90 and O/R90.

3. Open the door by turning the hinges, not by sliding.
4. Clean the glass as per 'Maintenance' section.
5. Close the door by rotating around the hinges with the lever in the highest position.
6. In the final position, gently press the lower part of the door frame by turning the lever to the lower position and securing it in the frame.

When opening the door by turning other than the bottom position or when the lever is in other than in the side position, the sliding mechanism or paint may be damaged.

Cleaning the glass sheet of fireplace insert size 110 L and more:

NOTE: Current for fireplace inserts L - straight glass. Check the separate description for the fireplace inserts R90, 2R90 and O/R90.

Place the door in the lower position, lock it by turning the lever over the door.

1. Set the air control lever to the position MAX
2. Turn two levers on the both upper sides of the door to do free its upper side. Gently rotate the levers till it can't go any further which is about 40 °.
3. Tilt the top of the door away from the hearth.
4. Clean the glass as per 'Maintenance' section.
5. Close the door by pushing the top of door towards the hearth with the levers in the open position.
- 6.** Secure the door by rotating the levers in the frame in the final position

Installation Instruction

Accessories


Operating Instructions

Accessories

Sliding Door

We recommend that the top part /gather of the convector chamber is designed so that there is access to the sliding door system, i. e a hole or surface of sufficient size with plaster without tiling.

The vertical sliding mechanism covers need to be in line when bricklaying the corners of the fireplace. If the covers are bricked over it will obstruct later servicing of the sliding mechanism.

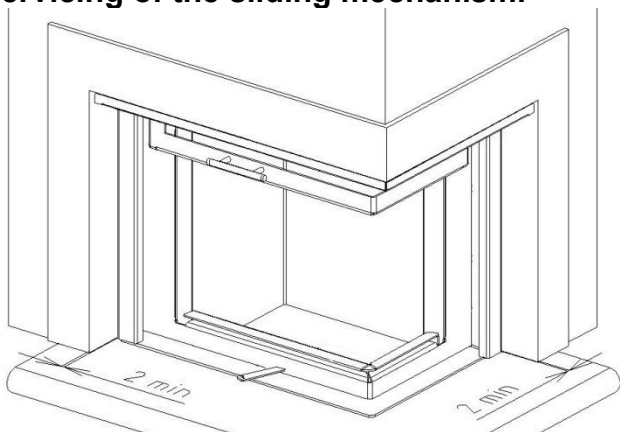

Doors open upwards. Before using, please ensure that the door locks are removed as per instructions.

Cleaning the glass sheet of fireplace insert size from 44 to 100:

7. Place the door in the lower position, lock it by turning the lever over the door.
8. Turn the lever on the right side of the door loosen one side of the door. Gently rotate the lever till it can't go any further which is about 120 °.
- Note: Check the separate description for the fireplace inserts R90, 2R90 and O/R90.*
9. Open the door by turning the hinges, not by sliding.
10. Clean the glass as per 'Maintenance' section.
11. Close the door by rotating around the hinges with the lever in the highest position.
12. In the final position, gently press the lower part of the door frame by turning the lever to the lower position and securing it in the frame.

When opening the door by turning other than the bottom position or when the lever is in other than in the side position, the sliding mechanism or paint may be damaged.

Cleaning the glass sheet of fireplace insert size 110 L and more:

NOTE: Current for fireplace inserts L - straight glass. Check the separate description for the fireplace inserts R90, 2R90 and O/R90.

Place the door in the lower position, lock it by turning the lever over the door.

7. Set the air control lever to the position MAX
8. Turn two levers on the both upper sides of the door to do free its upper side. Gently rotate the levers till it can't go any further which is about 40 ° .
9. Tilt the top of the door away from the hearth.
10. Clean the glass as per 'Maintenance' section.
11. Close the door by pushing the top of door towards the hearth with the levers in the open position.
- 12.** Secure the door by rotating the levers in the frame in the final position