

Installation Instruction

Accessories

 
Operating Instructions

Accessories

Lowered hearth

The lowered hearth allows positioning the bottom rim of the insert 170 mm above the ground.

It is necessary to empty the ash tray more often when operating.

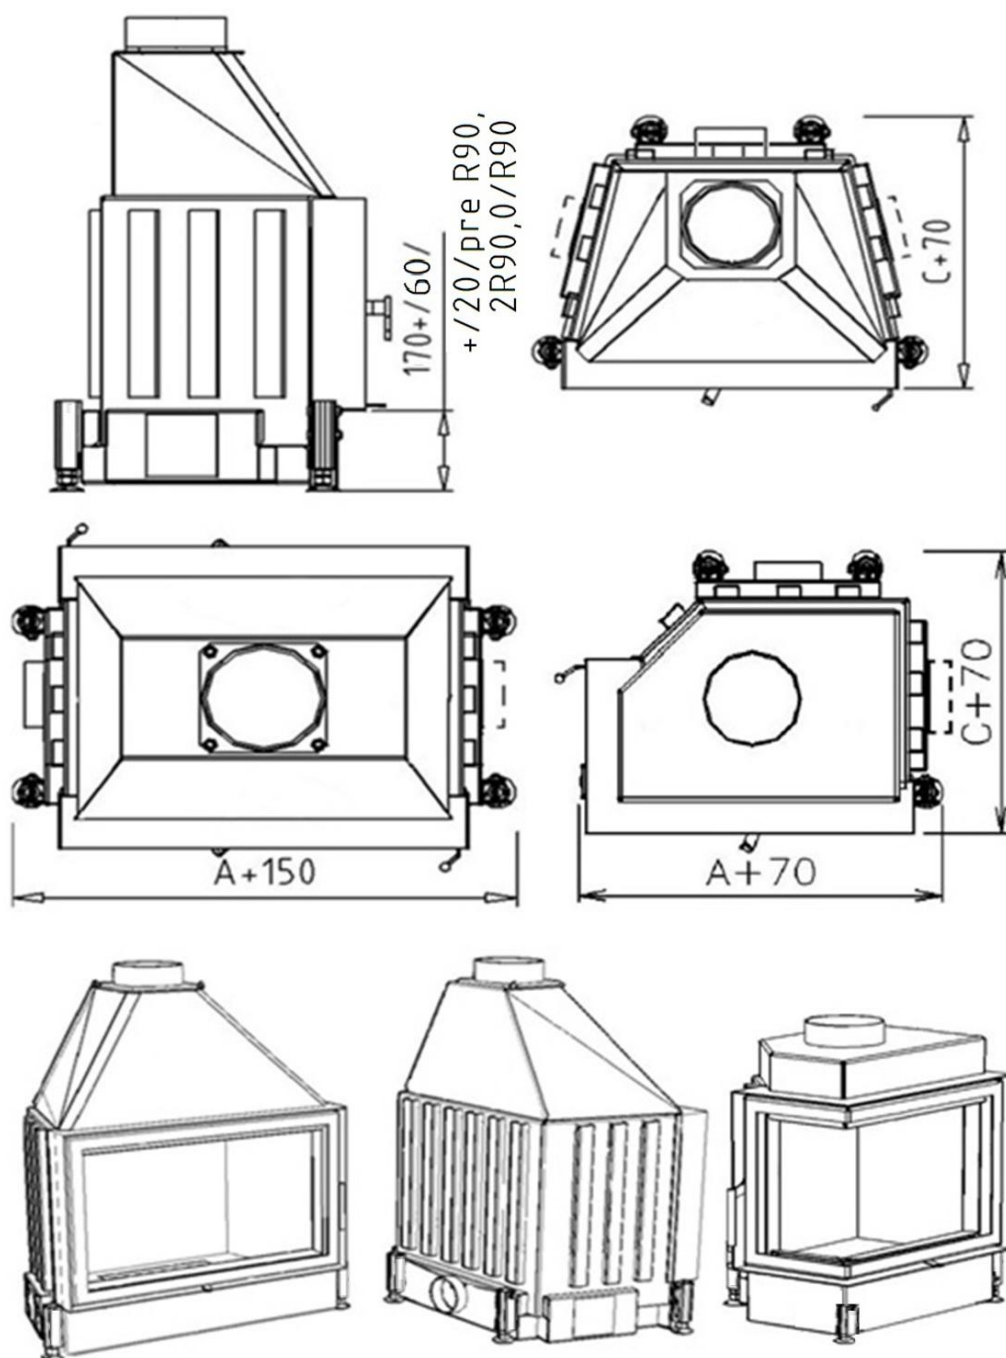

Installation Instruction

Accessories

 
Operating Instructions

Accessories

The external ash tray.

Installation of the external ash tray:

1. Remove the gasket frame, slide the gasket towards the door or remove it.
2. Shorten the casing of external ashtray to the length of $A + 130$
3. Seal the joint of the casing and fireplace insert with gasket and frame.
4. Construct the support around the external ashtray.

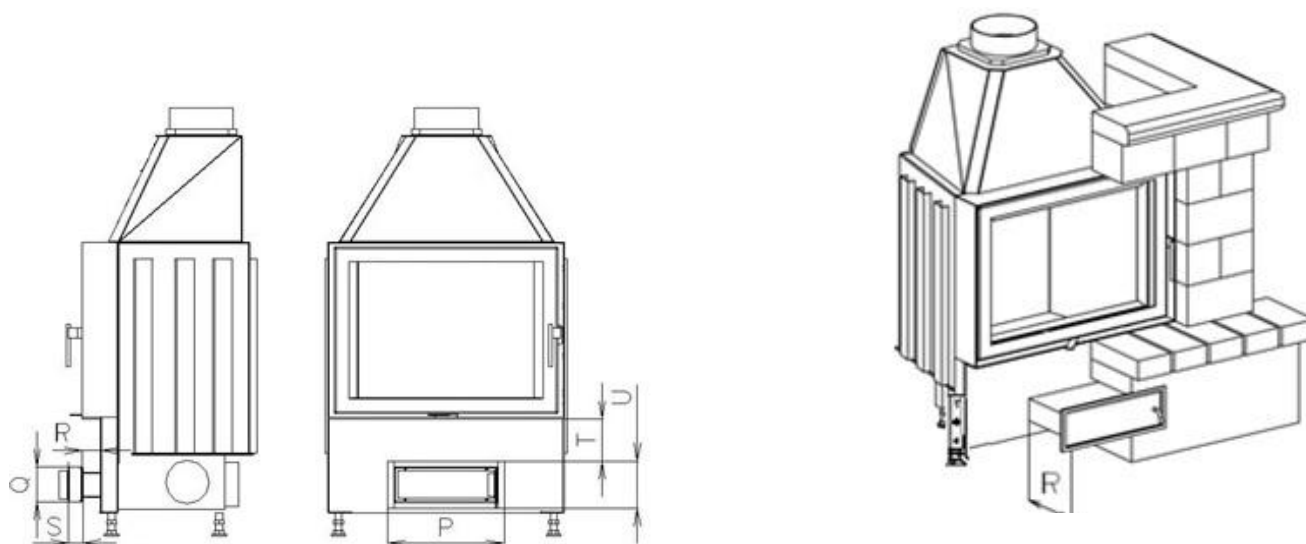

Rad/Range /Baureihe	ROTO, KPL	44-55	60-73	78	90-110	120-130	140-150
P	290	330	380	430	480	2x430	2x480
Q	120						
R	20 - 100 *						
	100 - 240 **						
S	40						
T	115						
U	155						

* it is necessary to adjust by cutting off from the ashtray casing

** no modification necessary

Installation Instruction

Accessories

Operating Instructions

Accessories

Hanging Accumulator

When transporting the fireplace insert after removing the packaging, the hanging accumulators can be removed for easier handling and re-inserted after placing and setting up the insert.


Procedure:

1. Hold the accumulation board against the fireplace insert, remove the upper board holders.

2. Remove (lift up) the accumulation board from the lower brackets.

To assembly – reverse the procedure.

For hot-air fireplaces it is necessary to ensure sufficient air flow around the fireplace insert.

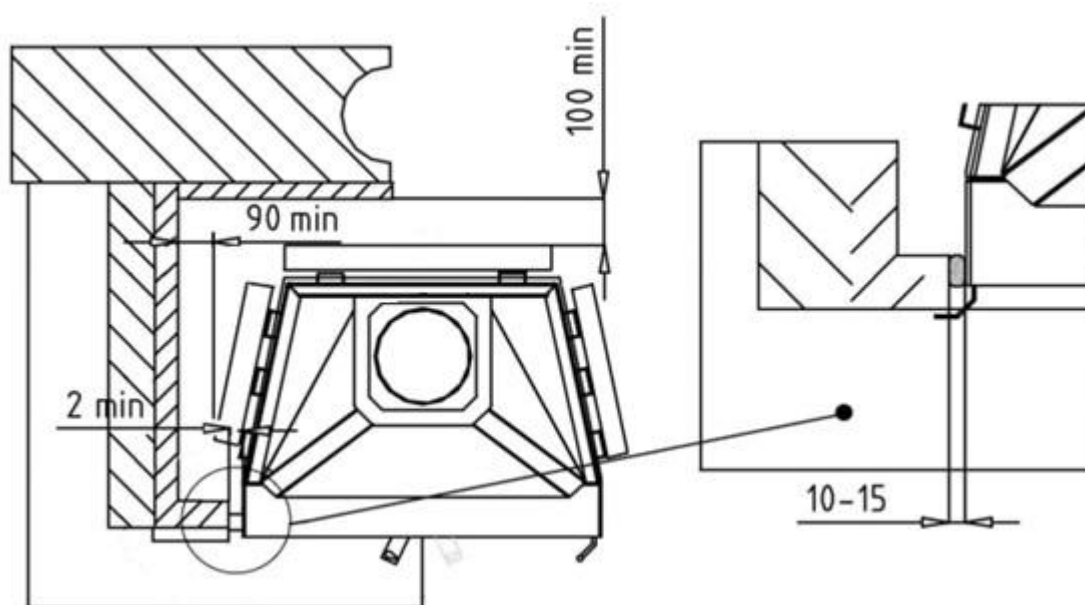

Thermal capacity -C

Range	44 - 90	100-1300
CH	32 KJ/°C	40 KJ/°C
CH R90	24 KJ/°C	32 KJ/°C
CH O	16 KJ/°C	