



DEFLECTOR ASSEMBLY

CHOPOK LE, VE

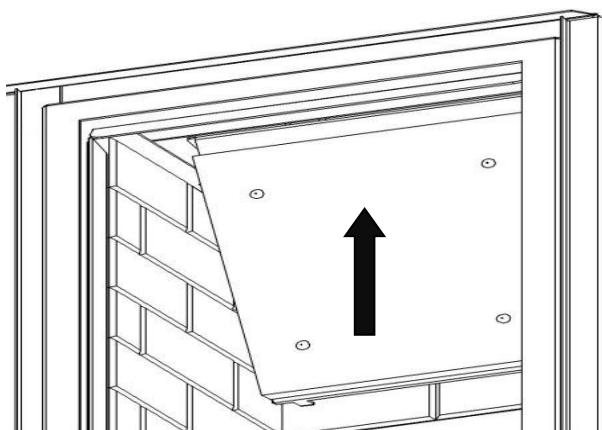


1. Lift the deflector upwards 20 mm minimally.
2. Move the deflector forward and drop it down.


CHOPOK, KAZETA, EKO, KPL

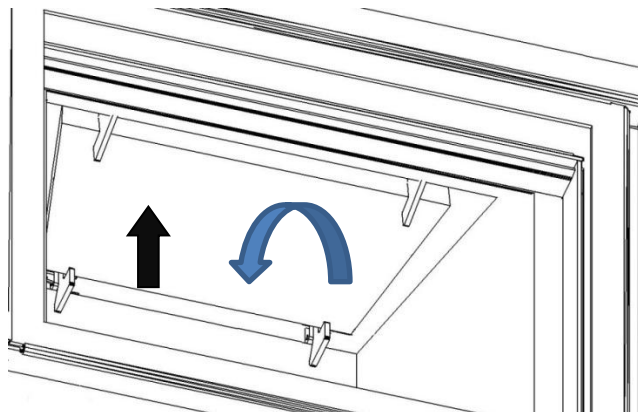

1. Lift the deflector upwards.
2. Turn the deflector and bring it down. Remember the original position of the deflector or make a note of it.

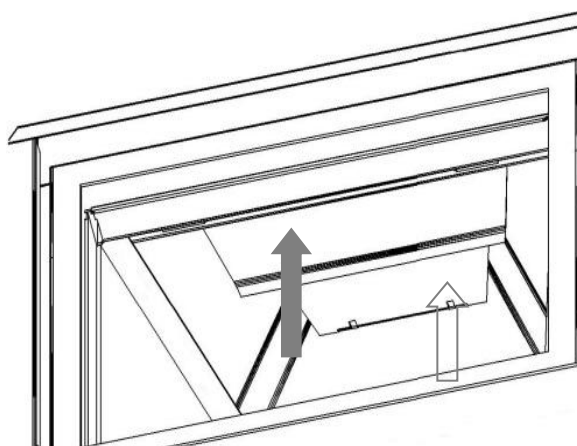


3. Lift the lower brake partition, slide away from the wall and remove it downwards.
4. Lift the upper brake partition, slide away from the wall and remove it downwards

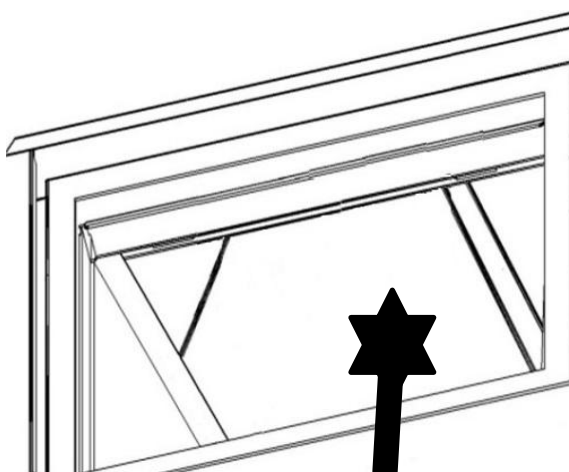


5. Clean the fireplace insert, smoke exhaust and chimney connection.

CHOPOK LE, VE

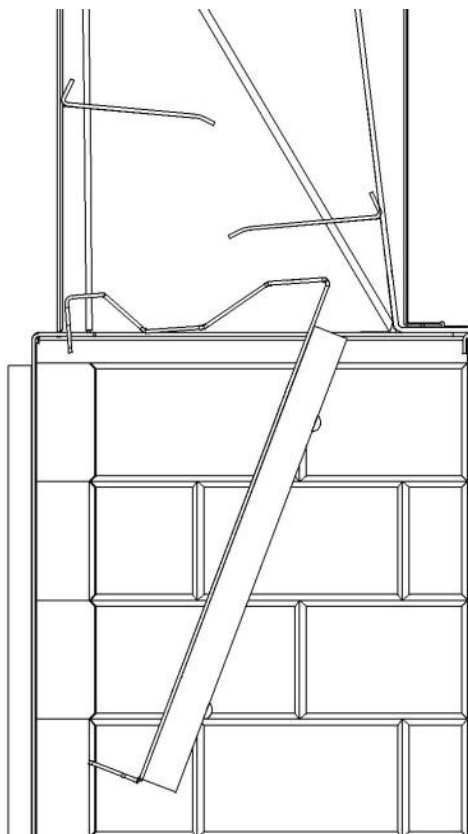

CHOPOK, KAZETA, EKO, KPL

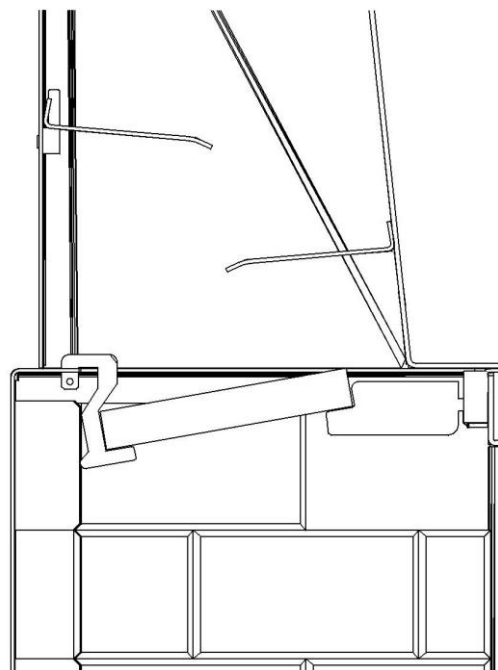


Note 1. Some of the inserts have split upper brake partition and some inserts don't have the upper brake partition at all.

Note 2. Fireplace inserts type EKO LD, KAZETA LD and BYSTRA O LD don't have the upper brake partition at all.

Note 3. Fireplace inserts type KPL, to point 2: Move the deflector to one side, tilt to one side and lower the deflector down.


DEFLECTOR ASSEMBLY

CHOPOK LE, VE

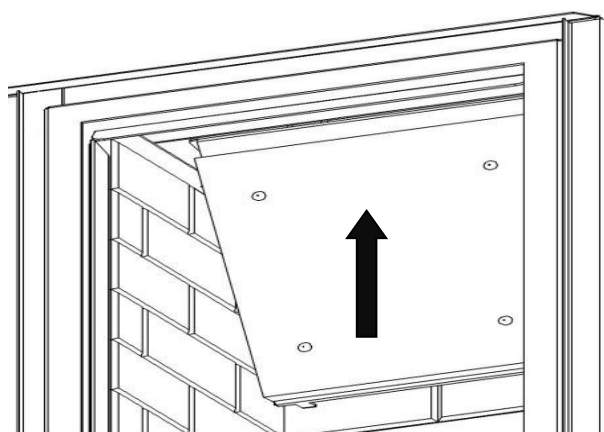


1. Lift the deflector upwards 20 mm minimally.
2. Move the deflector forward and drop it down.


CHOPOK, KAZETA, EKO, KPL

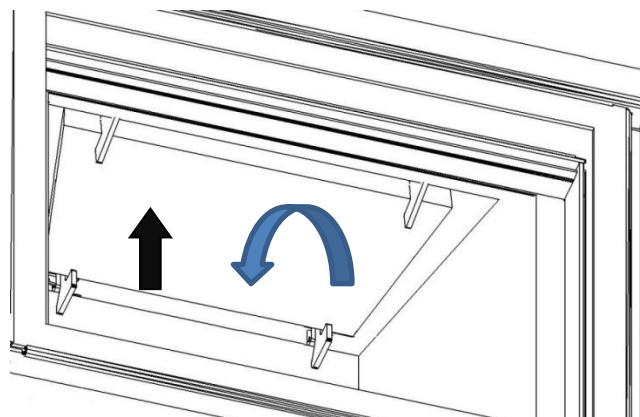

1. Lift the deflector upwards.
2. Turn the deflector and bring it down. Remember the original position of the deflector or make a note of it.

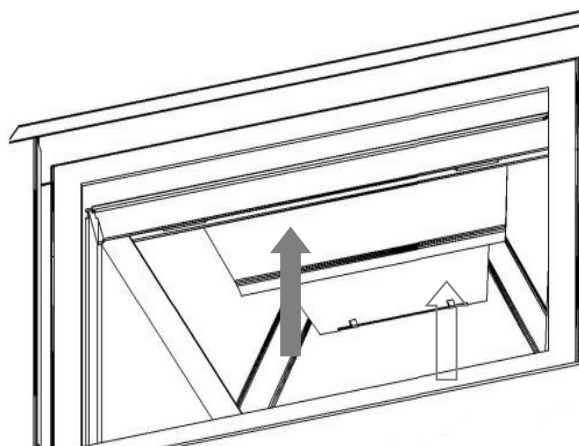


3. Lift the lower brake partition, slide away from the wall and remove it downwards.
4. Lift the upper brake partition, slide away from the wall and remove it downwards

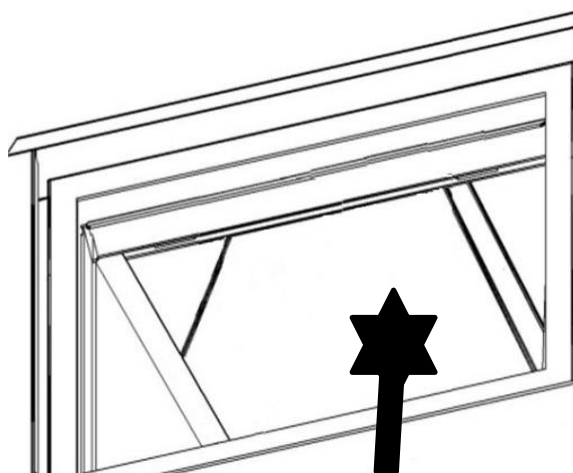


5. Clean the fireplace insert, smoke exhaust and chimney connection.

CHOPOK LE, VE

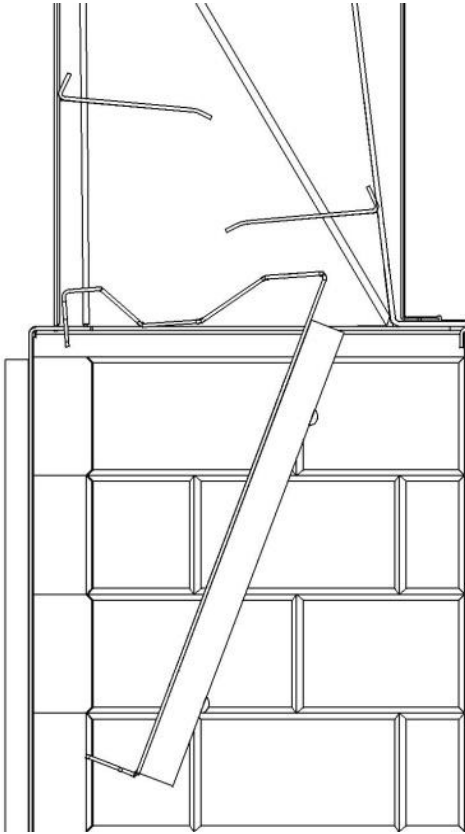

CHOPOK, KAZETA, EKO, KPL

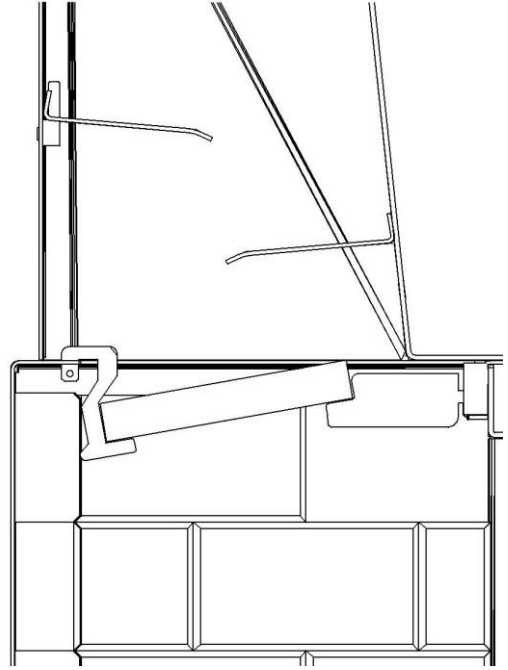

Note 1. Some of the inserts have split upper brake partition and some inserts don't have the upper brake partition at all.

Note 2. Fireplace inserts type EKO LD, KAZETA LD and BYSTRA O LD don't have the upper brake partition at all.

Note 3. Fireplace inserts type KPL, to point 2: Move the deflector to one side, tilt to one side and lower the deflector down.